

## HUSQVARNA SPECIAL TOOLS LIST

<u>TOOL PART NUMBER</u>	<u>DESCRIPTION</u>
12 24 806-01 . . . . .	.Holder for clutch (MK, MJ 125, All 4 speed)
12 24 877-01 . . . . .	.Mounting stand MI
15 19 081-01 . . . . .	.Spark plug wrench
15 19 107-01 . . . . .	.Bearing puller - blind side
15 19 109-01 . . . . .	.Crankcase splitting tool (4 speed)
15 19 119-01 . . . . .	.Sprocket holder MH, MI, MF, MG
15 19 122-01 . . . . .	.Damping spindle holder
15 19 125-01 . . . . .	.Crankcase mounting tool (4 speed)
15 19 178-01 . . . . .	.Drift (40mm)
15 19 179-01 . . . . .	.Drift (44mm)
15 19 243-01 . . . . .	.Mounting stand MJ
15 19 248-01 . . . . .	.Drift for piston pin (125, 175)
15 19 249-01 . . . . .	.Drift for piston pin (250, 360, 400, 390, 430)
15 19 250-01 . . . . .	.Drift for piston pin (450)
15 19 251-01 . . . . .	.Crankcase mounting tool (5 speed, 6 speed)
15 19 257-01 . . . . .	.Crankcase splitting tool (250, 450 MK)
15 19 261-01 . . . . .	.Clutch holding tool (MJ, MK)
15 19 268-01 . . . . .	.Puller for clutch ring (MJ, MK)
15 19 280-01 . . . . .	.Crankcase splitting tool (125)
15 19 322-01 . . . . .	.Timing pin (motoplat)
15 19 327-01 . . . . .	.Damping spindle holder (betor)
15 19 556-01 . . . . .	.Crankcase splitting tool (Auto, 125, 250, 430)
15 19 561-01 . . . . .	.Puller, clutch hub (Auto, 420)
15 19 564-01 . . . . .	.Mounting tool complete (All engines)
15 19 582-01 . . . . .	.Drift (Auto)
15 19 583-01 . . . . .	.Drift (Auto)
15 19 584-01 . . . . .	.Drift (Auto)
15 19 585-01 . . . . .	.Drift (Auto)
15 19 586-01 . . . . .	.Drift (Auto)
15 19 805-01 . . . . .	.Puller (Drive gear, All)
15 19 810-01 . . . . .	.Puller (Crankcase splitting tool, ML, MM, MN, CN, XN, WN)
15 19 837-01 . . . . .	.Crankcase splitting tool (360 Auto, 390, 420)
15 19 840-01 . . . . .	.Puller (Auto, 360, 390)
15 19 843-01 . . . . .	.Holder (Auto, Clutch hub)
15 19 847-01 . . . . .	.Spring Puller
15 19 851-01 . . . . .	.Crankcase splitting tool (125 mag engine)
15 19 861-01 . . . . .	.Swingarm needle bearing tool kit